Plug-in Installation autoflot function:

Step 1:Slide Mounting

Simple push-in Installation


Push the drawer horizotally onto this lide rail to complete the installation The frot link connect the drawer to the slide rail, ensuring the safety of the drawer fixed



INSTALLATIONS


Step 2:Front Connection Instation



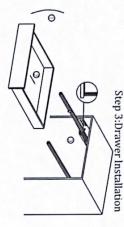

Removal:

 
Simple demdition, just need to hand the bottom of the drawer at same time the bottom of the buckles compression, then can remove




Front Connection with Height Adjustment Function:

  
The front connection with height adjustment function, it can adjust the drawer bottom and the gap between the slide, no tools through a white wheel to adjust the drawer+2mm height







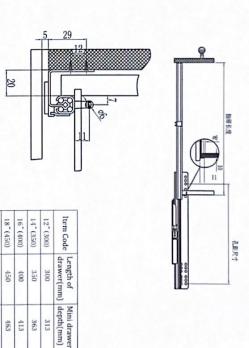



20" (500)

500

513

256 256 160 160 size(mm) Hole distance

550

288 288

Function Description:

- 1.Load capacity:300N
- Perfect Height and side stability the slidable rails provide the best sliding function
 Slide rails automatically eliminate dirt; withut maintance.
- 4. Self-closing function, close off gently.
- selft-closing function,making the drawer from the weight of safety shot down.

 5.Push-in Installation. As long as the drawer on the slide,push inside the installation is complete.

 6.With Height adjustment, you can adjust the clearance between the rail and the bott m of the.
- drawer by turning the white wheel,
- B. With Soft closing function.

No tools required to install and remove the drawer